



Wireless Control Panel

Arm and disarm the alarm system

EM8622

EAN: 8716065307672

OVERVIEW

- Wireless Control Panel for the Eminent EM8610 Wireless Alarm System
- Arm and disarm the e-Alarm
- Disarm the e-Alarm by holding the RFID-tag in front of the Control Panel
- Entry and exit delay
- Battery saving mode

SPECIFICATIONS

- 5 YEAR WARRANTY
- Dimensions in mm. (WxHxD): 90x135x15
- Weight in grams: 90
- Power supply : 3 x AAA batteries (included) or 12DV adapter (not included)
- Stand-by current: <3uA
- Alarm current: <30mA
- Wireless reach: Max. 80 meter (open field)
- Frequency: 433MHz
- Temperature: -10 to 50 degrees Celsius
- Humidity: <380% (no condensing)



Wireless Control Panel

Arm and disarm the alarm system

DESCRIPTION

The EM8622 Control Panel is suited for the Eminent EM8610 Wireless Alarm System. Locate the Control Panel near your front/back door. Arm and disarm the alarm system by using the Control Panel. Hold a RFID-tag in front of the Control Panel to disarm the e-Alarm.

(Note: the Control Panel will not warn you if the alarm system is armed or disarmed)



Wireless Control Panel

Arm and disarm the alarm system

IMAGES

