



#### **Wireless Control Panel**

Arm and disarm the alarm system

EM8622

EAN: 8716065307672

#### **OVERVIEW**

- Wireless Control Panel for the Eminent EM8610 Wireless Alarm System
- · Arm and disarm the e-Alarm
- Disarm the e-Alarm by holding the RFID-tag in front of the Control Panel
- · Entry and exit delay
- Battery saving mode

#### **SPECIFICATIONS**

- 5 YEAR WARRANTY
- Dimensions in mm. (WxHxD): 90x135x15
- Weight in grams: 90
- Power supply: 3 x AAA batteries (included) or 12DV adapter (not included)
- Stand-by current: <3uA
- Alarm current: <30mA
- Wireless reach: Max. 80 meter (open field)
- Frequency: 433MHz
- Temperature: -10 to 50 degrees Celsius
- Humidity: <380% (no condensing)





# **Wireless Control Panel**

Arm and disarm the alarm system

### DESCRIPTION

The EM8622 Control Panel is suited for the Eminent EM8610 Wireless Alarm System. Locate the Control Panel near your front/back door. Arm and disarm the alarm system by using the Control Panel. Hold a RFID-tag in front of the Control Panel to disarm the e-Alarm.

(Note: the Control Panel will not warn you if the alarm system is armed or disarmed)





# **Wireless Control Panel**

Arm and disarm the alarm system

# **IMAGES**





