



EM8690-R1
Wireless smoke detector

en

Manual

EM8690-R1 - Wireless smoke detector

Table of contents


1.0 Introduction	2
2.0 LED indicator.....	3
3.0 Settings	3
3.1 First use	3
3.2 Test Mode	4
3.3 Group settings (jumpers)	4
4.0 Connect to the alarm panel.....	4
5.0 Installation & Notices	4
6.0 Frequently Asked Questions and other related information	4
7.0 Service and support.....	5
8.0 Warning and points of attention	5
9.0 Warranty conditions.....	6

1.0 Introduction

Congratulations with the purchase of this high-quality Eminent product! This product has undergone extensive testing by Eminent's technical experts. Should you experience any problems with this product, you are covered by a five-year Eminent warranty. Please keep this manual and the receipt in a safe place.

Register your product now on www.eminent-online.com and receive product updates!

2.0 LED indicator

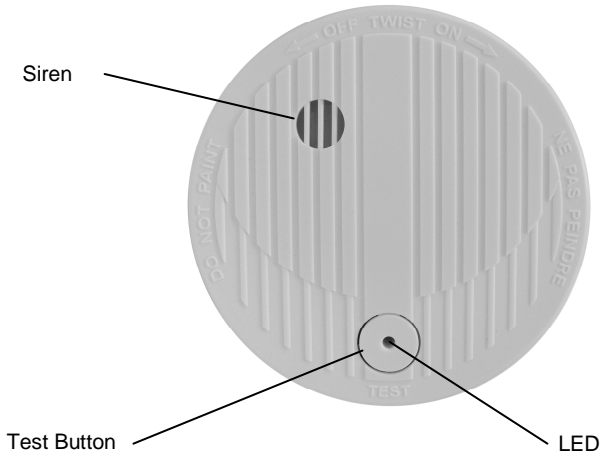

LED indicator :

- When the detector is in normal operating mode, the LED will flash once per 32 seconds.
- When the detector is in alarm mode, the LED will flash once every 0.62 seconds.

When the battery is low, the siren will give a “beep” every minute. The low battery warning will last for approximately 30 days.

3.0 Settings

3.1 First use

Install the battery in the compartment. Please be sure to remove the plastic protection foil from the battery to avoid connection problems.


3.2 Test Mode

Press the test button for about 5 seconds. The siren will give a loud warning signal. It's recommended to test the detector weekly.

3.3 Group settings (jumpers)

Note : *The smoke detector is set to the recommended 24-hour-group!*

4.0 Connect to the alarm panel

Enter the password and press the memo button  on the alarm panel. Press and hold the test button of the smoke detector for 3 seconds. The alarm panel will give a short beep. This means the smoke detector is successfully connected. If the alarm panel beeps twice, this means the smoke detector was already connected.

5.0 Installation & Notices

It is recommended to mount the detector in a central position within the ceiling of the room, away from heat sources and from cooking steams.

It is important to :

- keep the device far away from places that are too hot or too cold.
- keep the device away from places with too much wind, smoke or dust.
- test the device at least once a month.
- clean the ventilation openings with a cotton-bud at least once every six months; (turn off the detector before proceeding with the cleaning).

6.0 Frequently Asked Questions and other related information

The latest Frequently asked questions for your product can be found on the support page of your product. Eminent will update these pages frequently to assure you have the most recent information. Visit www.eminent-online.com for more information about your product.

7.0 Service and support

This users manual has been carefully written by Eminent's technical experts. If you have problems installing or using the product, please fill out the support form at the website www.eminent-online.com/support.

You can also contact us by phone. Please check www.eminent-online.com/support for the helpdesk phone number and opening hours.

8.0 Warning and points of attention



Due to laws, directives and regulations set out by the European parliament, some (wireless) devices could be subject to limitations concerning its use in certain European member states. In certain European member states the use of such devices could be prohibited. Contact your (local) government for more information about this limitations.

Always follow up the instructions in the manual*, especially where it concerns devices which need to be assembled.

Warning: In most cases this concerns an electronic device. Wrong/improper use may lead to (severe) injuries!

Repairing of the device should be done by qualified Eminent staff. The warranty immediately voids when products have undergone self repair and/or by misuse. For extended warranty conditions, please visit our website at www.eminent-online.com/warranty.

**Tip: Eminent manuals are written with great care. However, due to new technological developments it can happen that a printed manual does not longer contain the most recent information.*

If you are experiencing any problems with the printed manual or you can not find what you are looking for, please always check our website www.eminent-online.com first for the newest updated manual.

Also, you will find frequently asked questions in the FAQ section. It is highly recommended to consult the FAQ section. Very often the answer to your questions will be found here.

9.0 Warranty conditions

The five-year Eminent warranty applies to all Eminent products, unless mentioned otherwise before or during the moment of purchase. After buying a second-hand Eminent product the remaining period of warranty is measured from the moment of purchase by the product's initial owner. Eminent warranty applies to all Eminent products and parts, indissolubly connected or mounted to the product it concerns. Power supply adapters, batteries, antennas and all other products not directly integrated in or connected to the main product or products of which, without reasonable doubt, can be assumed that wear and tear during use will show a different pattern than the main product, are not covered by the Eminent warranty. Products are not covered by the Eminent warranty when exposed to incorrect/improper use, external influences or when opening the service parts of the product by parties other than Eminent. Eminent may use refurbished materials for repair or replacement of your defective product. Eminent cannot be held responsible for changes in network settings by internet providers. We cannot guarantee that the Eminent networking product will keep working when settings are changed by the internet providers. Eminent cannot guarantee the working of web services, apps and other third party content that is available through Eminent products. Eminent products with an internal hard disk have a limited warranty period of two years on the hard disk. Eminent could not be held responsible for any data lost. Please make sure that if the product stores data on a hard drive or other memory source, you will make a copy before you return the product for repair.

When my product gets defective

Should you encounter a product rendered defective for reasons other than described above: Please contact your point of purchase for taking care of your defective product.



WWW.EMINENT-ONLINE.COM

Trademarks: all brand names are trademarks and/or registered trademarks of their respective holders.

The information contained in this document has been created with the utmost care. No legal rights can be derived from these contents. Eminent cannot be held responsible, nor liable for the information contained in this document.



Eminent is a member of the Intronics Group

EN|EU DECLARATION OF CONFORMITY

This device complies with the essential and other relevant requirements of the R&TTE Directive (1999/5/EC) and the RoHS Directive 2011/65/EU.

NL|EU-KONFORMITEITSVERKLARING

Dit apparaat voldoet aan de essentiële en andere relevante vereisten van de R&TTE richtlijnen en de RoHS richtlijn 2011/65/EU.

IT|DICHIARAZIONE UE DI CONFORMITÀ

Questo dispositivo è conforme ai requisiti essenziali e altre rilevanti della direttiva R & TTE (1999/5 / CE) e la direttiva RoHS 2011/65 / UE.

ES|DECLARACIÓN UE DE CONFORMIDAD

Este dispositivo cumple con los requisitos pertinentes esenciales y otras de la Directiva R & TTE (1999/5 / CE) y la Directiva RoHS Directiva 2011/65 / UE.

PT|DECLARAÇÃO DE CONFORMIDADE UE

Este dispositivo está em conformidade com os requisitos essenciais pertinentes e outros da Directiva R & TTE (1999/5 / CE) e da RoHS Directiva 2011/65 / UE.

HU|EU-MEGFELELŐSÉGI NYILATKOZAT

Ez a készülék megfelel az alapvető és más vonatkozó követelmények, az R & TTE irányelv (1999/5 / EK) és a RoHS szülő 2011/65 / EU.

FR|DECLARATION UE DE CONFORMITÉ

Cet appareil est conforme aux exigences essentielles pertinentes et d'autres de la directive R & TTE (1999/5 / CE) et la directive RoHS 2011/65 / UE.

DE|EU-KONFORMITÄTSERKLÄRUNG

Dieses Gerät entspricht den wesentlichen und anderen relevanten Anforderungen der R & TTE-Richtlinie (1999/5 / EG) und die RoHS-Richtlinie 2011/65/EU.

PL|DEKLARACJA ZGODNOŚCI UE

To urządzenie jest zgodne z zasadniczymi i innymi odpowiednimi wymogami dyrektywy R & TTE (1999/5 / WE) i dyrektywy RoHS 2011/65/UE.

CZ|EU PROHLÁŠENÍ O SHODĚ

Toto zařízení je v plném souladu se základními požadavky a dalšími relevantními požadavky Směrnice R&TTE (1999/5/EC) a Směrnice RoHS 2011/65/EU.

DK|OVERENSSTEMMELSEERKLÆRING

Denne enhed overholder de væsentlige krav og øvrige relevante krav i R&TTE-direktivet (1999/5/EC) og RoHS-direktiviet 2011/65/EU.

NO|EF-ERKLÆRING

Denne enheten er i samsvar med de grunnleggende krav og øvrige relevante krav i R&TTE-direktivet (1999/5/EØF) og RoHS-direktiviet 2011/65/EF.

SV|EU FÖRSÄKRAN OM ÖVERENSSTÄMMELSE

Denna enhet uppfyller de grundläggande kraven och andra relevanta krav i R&TTE-direktivet (1999/5/EC) och RoHS direktiv 2011/65/EU.

FI|VAATIMUSTENMUKAISUUSVAKUUTUS

Tämä laite täyttää olennaiset vaatimukset ja muut asiaankuuluvat vaatimukset R & TTE-direktiivin (1999/5 / EU) , ja RoHS-direktiivin 2011/65/UE .

RO|DECLARAȚIE DE CONFORMITATE UE

Acest dispozitiv este conform cu cerințele esențiale și cu celelalte cerințe relevante din Directiva R&TTE (1999/5/CE) și din Directiva RoHS 2011/65/UE.

GR|ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ

Αυτή η συσκευή συμμορφώνεται με τις ουσιαστικές απαραίτητες προϋποθέσεις και άλλες απαραίτητες προϋποθέσεις της R&TTE Οδηγίας (1999/5/EC) και της RoHS Οδηγίας 2011/65/UE.

TR|AB UYGUNLUK BEYANI

Bu cihaz R&TTE Direktifinin (1999/5/EC) ve RoHS Direktifinin 2011/65/AB temel gereksinimleri ile diğer gereksinimlerine uygundur.



EU DECLARATION OF CONFORMITY

This declaration of conformity is issued under the sole responsibility of the manufacturer

Product number: EM8690 R1

Manufacturer: Eminent

Product Description: Wireless smoke detector

Conforms to the following standards:

EN 14604: 2005

I, the undersigned, hereby declare that the device conforms with the essential and other relevant requirements of the R&TTE Directive (1999/5/EC) and to the above standards

The object of the declaration described above is in conformity with Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment



Place: Barneveld, The Netherlands

Date: 2013-10-03

Name: Marc Pannebakker, Marketing Director

Signature:

